ORDER NO. SD81082022C4

Service Manual

Turntable System

SL-D212

[PA], [PE], [PC]

SL-D212(K)

[PA], [PE], [PC]

*** The colors of this model included silver and black.**
*** The black type model is provided with (K) in the Service Manual.**

Areas

* [PA] is available in far East PX.
* [PE] is available in European Military.
* [PC] is available in European Audio Club.

Please use this manual together with the service manual for Model No. SL-D212/SL-D212 (K), Order No. SD81071976C8.

Specifications

Specifications are subject to change without notice for further improvement.
Weight and dimensions shown approximate.

■ General

Power supply:	~110–120/220–240V, 50 or 60 Hz
Power consumption:	7 W
Dimensions: (W×H×D)	43×10.6×37.5 cm (16-15/16"×4-7/32"×14-3/4") Maximum height when top (dust cover) is open. 43×37×42 cm 16-15/16"×14-9/16"×16-17/32"
Weight:	5 kg (11 lb.)

■ Turntable section

Type:	Automatic turntable Auto return Auto stop Manual play
Drive method:	Direct drive
Motor:	Brushless DC motor
Drive control method:	F·G servo control
Turntable platter	Aluminum die-cast Diameter 31.2 cm (12-9/32")
Turntable speeds:	33-1/3 rpm and 45 rpm
Pitch control:	10% adjustment range
Wow and flutter:	0.012% WRMS* 0.025% WRMS (JIS C5521) ±0.035% peak (IEC 98A Weighted)

*This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including platter. Measured by obtaining signal from built-in frequency generator of motor assembly.

Rumble:	−56 dB (IEC 98A Unweighted) −78 dB (IEC 98A Weighted)

■ Tonearm section

Type:	Universal tonearm "S" shaped tubular arm Static balanced type
Effective length:	230 mm (9-1/16")
Overhang:	15 mm (19/32")
Tracking error angle:	Within 2°32′ at the outer groove of 30 cm (12") record Within 0°32′ at the inner groove of 30 cm (12") record
Offset angle:	22°
Friction:	Less than 7 mg (lateral, vertical)
Effective mass:	11 g (without cartridge)
Stylus pressure adjustment range:	0–2.5 g
Headshell weight:	8 g
Phono cable capacitance:	135 pF

■ Cartridge section

Type:	Moving magnet stereo cartridge
Frequency response:	20 Hz to 25 kHz
Output voltage:	2.5 mV 1 kHz, 5 cm/s. zero to peak lateral velocity (7 mV 1 kHz,10 cm/s. zero to peak 45° velocity [DIN 45 500])
Channel separation:	22 dB 1 kHz
Channel balance:	Within 2 dB at 1 kHz
Load impedance:	47 kΩ to 100 kΩ
Stylus pressure:	1.75±0.25 g (17.5±2.5 mN)
Replacement stylus:	EPS-74STSD (ATN71)

Technics

Panasonic Tokyo
Matsushita Electric Industrial Co., Ltd.
1-2, 1-chome, Shiba-koen, Minato-ku, Tokyo 105 Japan

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

CHANGES

■ REPLACEMENT PARTS LIST

(K)-marked parts are used for black type only.

Ref. No.		Change of Part No. SL-D212/D212 (K) (ORDER NO. SD81071976C8)	Change of Part No. SL-D212/D212 (K) [PA, PE, PC]	Part Name & Description	Per Set (Pcs.)	Remarks
CAPACITOR						
C401	⚠	ECQU2A473MF ECQE2A473MZ	ECQE2A473MZ	Polyester, 250VAC, 0.047μF, ± 20%	1	
CABINET and CHASSIS PARTS						
4		SFNND21S01 SFNND21G02	SFNND21P01 [PA, PE]	Name Plate	1	○
		SFNND21X01 SFNND21R01	SFNND21P02 [PC]	Name Plate	1	○
19	⚠	SJA139 SJA141 SJA137	**SJA83**	AC Cord	1	
20		SFUM190–12 SFUM190–11	SFUM190–12	Bushing, AC Cord	1	
TONEARM PARTS						
103		EPC–U25S	EPC74SMAD	Cartridge	1	
		EPS–25CS	EPS74STSD	Stylus	1	
SCREW and NUT						
N8		SFCZV8800	SFPEV7803	Screw, Cartridge	2	
N22		Addition	SFPEN3302	Nut, Cartridge	2	
ACCESSORIES						
A1		SFNUD21S01 SFNUD21G01 SFNUD21X01	SFNUD21P01	Instructions Book, Printed Matter	1	○
A3		SFDKI19118	Deletion	2 Pin Plug	0	
A4		Addition	QJP0603S	Adaptor, Gimens	1	
PACKING PARTS						
P1	○	SFHPD21M01	○ SFHPD21M01	Carton Box (Silver)	1	
	○	SFHPD21C01				
	(K)	SFHPD21M21	(K) SFHPD21M21	Carton Box (Black)	1	
	(K)	SFHPD21C21				

Printed in Japan
81080450 Ⓗ TK/YW

ORDER NO. SD81071976C8

Service Manual

Turntable System

SL-D212

[E], [EK], [XL], [EG], [EB], [EF], [XA], [XM], [EH], [Ei], [EC]

SL-D212(K)

[E], [EK], [XL], [EG], [EB], [EF], [XM]

Areas

* [E] is available in Switzerland and Scandinavia.
* [EK] is available in United Kingdom.
* [XL] is available in Australia.
* [EG] is available in F.R. Germany.
* [EB] is available in Belgium.
* [EF] is available in France.
* [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
* [XM] is available in Central South America.
* [EH] is available in Holland.
* [Ei] is available in Italy.
* [EC] is available in Czechoslovakia.

*** The colors of this model include silver and black.**
*** The black type model is provided with (K) in the Service Manual.**

English

Specifications

Specifications are subject to change without notice for further improvement.
Weight and dimensions shown approximate.

■ General

Power supply:	~110–120/220–240V, 50 or 60 Hz
Power consumption:	7 W
Dimensions: (W×H×D)	43×10.6×37.5 cm (16-15/16"×4-7/32"×14-3/4")
	Maximum height when top (dust cover) is open. 43×37×42 cm 16-15/16"×14-9/16"×16-17/32"
Weight:	5 kg (11 lb.)

■ Turntable section

Type:	Automatic turntable Auto return Auto stop Manual play
Drive method:	Direct drive
Motor:	Brushless DC motor
Drive control method:	F·G servo control
Turntable platter	Aluminum die-cast Diameter 31.2 cm (12-9/32")
Turntable speeds:	33-1/3 rpm and 45 rpm
Pitch control:	10% adjustment range
Wow and flutter:	0.012% WRMS* 0.025% WRMS (JIS C5521) ±0.035% peak (IEC 98A Weighted)

*This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including platter. Measured by obtaining signal from built-in frequency generator of motor assembly.

Rumble:	−56 dB (IEC 98A Unweighted) −78 dB (IEC 98A Weighted)

■ Tonearm section

Type:	Universal tonearm "S" shaped tubular arm Static balanced type
Effective length:	230 mm (9-1/16")
Overhang:	15 mm (19/32")
Tracking error angle:	Within 2°32′ at the outer groove of 30 cm (12") record Within 0°32′ at the inner groove of 30 cm (12") record
Offset angle:	22°
Friction:	Less than 7 mg (lateral, vertical)
Effective mass:	11 g (without cartridge)
Stylus pressure adjustment range:	0–2.5 g
Applicable cartridge weight range:	5—7.5 g
Headshell weight:	8 g
Phono cable capacitance:	135 pF

Technics

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka Japan

■ Cartridge section (EPC-U25S)

Type:	Moving magnet
Frequency response:	10 Hz to 35 kHz 20 Hz to 10 kHz ± 1 dB
Output voltage:	2.5 mV at 1 kHz 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz 10 cm/s. zero to peak 45° velocity [DIN 45 500])
Channel separation:	22 dB at 1 kHz
Channel balance:	Within 1.8 dB at 1 kHz
Compliance (dynamic):	10×10^{-6} cm/dyne at 100 Hz
Stylus pressure:	1.75 ± 0.25 g (17.5 ± 2.5 mN)
Load impedance:	47 kΩ to 100 kΩ
Weight:	5 g (cartridge only)
Replacement stylus:	EPS-25CS (Equivalent replacement stylus: EPS-25ES)

Deutsch

TECHNISCHE DATEN

Änderungen de technischen Daten vorbehalten.
Die angegebenen Gewichts- und Abmessungsdaten sind circa Werte.

■ Allgemeine Daten

Stromversorgung:	~110–120/220–240 V, 50/60 Hz Wechselstrom
Leistungsaufnahme:	7 W
Abmessungen (B×H×T):	43×10,6×37,5 cm { Maximale Höhe bei vollständing geöffnetem Oberteil (Staubabdeckung) 43×37×42 cm }
Gewicht:	5 kg

■ Plattenspieler

Typ:	Automatischer Plattenspieler Rückführautomatik Stopautomatik Manueller Betrieb
Antrieb:	Direktantrieb
Motor:	Kollektorloser Gleichstrommotor
Antriebsregel-Methode:	FG-Servo-Steuerung
Plattenteller:	Aluminium-Spritzguß Durchmesser 31,2 cm
Plattenteller-Drehzahlen:	33-1/3 und 45 U/min
Drehzahl-Feinregulierung:	10% Einstellbereich
Gleichlaufschwankungen:	0,012% WRMS* 0,025% WRMS (JIS C5521) ±0,035% Spitze (IEC 98A bewertet)

*Diese Nennleistung bezieht sich auf das Laufwerk-Bauteil allein, ausschließlich Einflüsse von Schallplatte, Tonabnehmer oder Tonarm, aber einschließlich Plattenteller. Gemessen anhand von Signalen vom eingebauten Frequenzgenerator des Motorbauteils.

Rumpel-Fremdspannungsabstand:	−56 dB (IEC 98A unbewertet)
Rumpel-Geräuschspannungsabstand:	−78 dB (IEC 98A bewertet)

■ Tonarm

Typ:	Universal-Tonarm S-förmiger Rohrtonarm Statisch ausbalanciert
Effektive Länge:	230 mm
Überhang:	15 mm
Spurfehlwinkel:	2°32′ bei der Einlaufrille einer 30 cm-Platte 0°32′ bei der Auslaufrille einer 30 cm-Platte
Kröpfungswinkel:	22°
Lagerreibung:	Weniger als 7 mg (horizontal, vertikal)
Effektive Masse:	11 g (ohne Tonabnehmer)
Auflagekraft-Einstellbereich:	0—2,5 g
Zulässiger Tonabnehmer-Gewichtbereich:	5—7,5 g
Tonarmkopf-Gewicht:	8 g
Phonokabl-Kapazitanz:	135 pF

■ Tonabnehmer (EPC-U25S)

Typ:	Magnetischer Tonabnehmer
Frequenzgang:	10 Hz bis 35 kHz 20 Hz bis 10 kHz ±1 dB
Ausgangsspannung:	2,5 mV bei 1 kHz 5 cm/s. Null-zu-Spitze, lateral [7 mV bei 1 kHz 10 cm/s. Null-zu-Spitze, 45° (DIN 45 500)]
Kanaltrennung:	22 dB bei 1 kHz
Kanalabweichung:	Innerhalb 1,8 dB bei 1 kHz
Nachgiebigkeit (dynamisch):	10×10^{-6} cm/dyn bei 100 Hz
Auflagekraft:	1,75 ± 0,25 g (17,5 ± 2,5 mN)
Impedanz:	47 kΩ bis 100 kΩ
Gewicht:	5 g (nur Tonabnehmer)
Ersatznadel:	EPS-25CS (Gleichwertiger Ersatztonabnehmer: EPS-25ES.)

Français

CARACTERISTIQUES

Les spécifications sont susceptibles d'être modifiées sans préavis.
Le poids et les dimensions donnés sont approximatifs.

■ Généralités

Alimentation: Alternatif 110-120/220-240V, 50 ou 60 Hz
Consommation: 7 W
Dimensions: 43×10,6×37,5 cm
(L×H×P) Hauteur maximum lorsque le dessus (couvercle protège-poussière) est ouvert. 43×37×42 cm
Poids: 5 kg

■ Platine de lecture

Type: Platine automatique
Retour automatique
Arrêt automatique
Audition à commande manuelle
Système d'entraînement: Entraînement direct
Moteur: Moteur C.C. sans balai
Groupe de réglage: Servocommande du générateur de fréquences
Plateau de lecture: En aluminium moulé sous pression
Diamètre 31,2 cm
Vitesses de rotation: 33-1/3 et 45 t/p.m
Réglage d'écart: Plage de réglage de 10%
Pleurage et scintillement: 0,012% de valeur efficace*
0.025% de valeur efficace (JIS C5521)
±0,035% de crête (IEC 98A Pondéré)

*Ce régime nominal se rapporte à l'ensemble du tourne-disque seul, excluant les effets du disque, de la cellule pick-up ou du bras de lecture, mais comprenant le plateau. Mesuré par l'obtention d'un signal provenant du générateur de fréquences incorporé de l'ensemble du moteur.

Ronflement: −56 dB (IEC 98A Non pondéré)
−78 dB (IEC 98A Pondéré)

■ Bras de lecture

Type: Bras de lecture universel
Bras tubulaire en forme de "S"
De type à équilibrage statique
Longueur effective: 230 mm
Porte-à-faux: 15 mm
Angle d'erreur de piste: En deçà de 2 32' au sillon extérieur d'un disque de 30 cm
En deçà de 0 32' au sillon intérieur d'un disque de 30 cm
Angle de décalage: 22
Frottement: Moins de 7 mg (latéral et vertical)
Masse réelle: 11 g (sans la cellule pick-up)
Plage de réglage de la pression d'appui: 0–2.5 g
Gamme du poids des cellules pick-up utilisables: 5—7,5 g
Poids de la coque porte-cellule: 8 g
Capacitance propre du câble pick-up: 135 pF

■ Cellule pick-up (EPC-U25S)

Type: Aimant mobile
Réponse en fréquence: 10 Hz à 35 kHz
20 Hz à 10 kHz ± 1 dB
Tension de sortie: 2,5 mV à 1kHz; 5 cm/s., zéro à vitesse latérale de crête
(7 mV à 1 kHz
10 cm/s., zéro à vitesse 45 de crête [DIN 45 500])
Séparation de canal: 22 dB à 1kHz
Equilibrage des canaux: En deçà de 1,8 dB à 1 kHz
Elasticité (dynamique): 10×10^{-6} cm/dyne à 100 Hz
Pression de la pointe de lecture: 1,75 ± 0,25 g
(17,5 ± 2,5 mN)
Impédance de charge: 47 kΩ to 100 kΩ
Poids: 5 g (cellule seule)
Pointe de lecture de remplacement: EPS-25CS
(Pointe de lecture de remplacement équivalente: EPS-25ES.)

Español

ESPECIFICACIONES

Las especificaciones quedan sujetas a cambios sin aviso previo.
El peso y las dimensiones indicados son aproximados.

■ En general

Alimentación de corriente: ~110—120/220—240 V, 50 ó 50 Hz
Consumo de corriente: 7W
Dimensiones: 43×10,6×37,5 cm
(Ancho×Alto×Prof.) Altura máxima cuando la parte de arriba (tapa contra el polvo) está abierta.
43×37×42 cm
Peso: 5 kg

■ Sección del plato giratorio

Tipo: Plato giratorio automático
Retorno automático
Parada automática
Ejecución manual
Método de accionamiento: Accionamiento directo
Motor: Motor de corriente continua sin escobillas

Método de control de accionamiento:	Sevocontrol por generador de frecuencias
Platillo del plato giratorio:	Aluminio fundido Diámetro 31,2 cm
Velocidades del plato giratorio:	33-1/3 y 45 rpm
Control de altura de sonido:	Ambito de ajuste de 10%
Ululaciones y trémolo:	0,012% WRMS 0,025% WRMS (JIS C5521) ±0,035% cresta (IEC 98A Ponderado)

* Estas características se refieren únicamente al conjunto del plato giratorio, con exclusión de los efectos provenientes del disco, cartucho o del brazo sonoro, incluyendo, empero, el platillo. La medida fue tomada por medio de la señal obtenida del generador de frecuencia incorporado del conjunto del motor.

Ruido de rodadura:	−56 dB (IEC 98A No ponderado) −78 dB (IEC 98A Ponderado)

■ Sección del brazo sonoro

Tipo:	Brazo sonoro universal Brazo tubular en forma de "S" Tipo equilibrado estático
Longitud efectiva:	230 mm
Proyección:	15 mm
Angulo de error de seguimiento:	Inferior a 2°32′ en el surco exterior de un disco de 30 cm Inferior a 0°32′ en el surco interior de un disco de 30 cm
Angulo de descentramiento:	22°
Fricción:	Menos de 7 mg (en sentido lateral y vertical)
Masa efectiva:	11 g (sin cartucho)
Radio de ajuste de la presión de la aguja:	0 a 2,5 g
Radio de peso de cartucho utilizable:	5—7,5 g
Peso de la cápsula de la cabeza:	8 g
Capacitancia de cable de fono:	135pF

■ Sección del cartucho (EPC-U25S)

Tipo:	Imán móvil
Respuesta de frecuencia:	de 10 Hz a 35 kHz de 20 Hz a 10 kHz±1 dB
Voltaje de salida:	2,5 mV a 1 kHz Con velocidad lateral der cero a cresta de 5 cm/s [7 mV a 1 kHz Velocidad de 45°de cero a cresta de 10 cm/s (DIN 45 500)]
Separación de canales:	22 dB a 1 kHz
Equilibrio de canales:	Sin exceder 1,8 dB a 1 kHz
Elasticidad (dinámica):	10×10^{-6} cm/dina a 100 Hz
Presión de la aguja:	1,75±0,25 g (17,5±2,5 mN)
Impedancia de carga:	47 kΩ a 100 kΩ
Peso:	5 g (cartucho sólo)
Aguja de recambio:	EPS-25CS (Aguja de recambio equivalente: EPS-25ES.)

■ CONTENTS

	Page
LOCATION OF CONTROLS	5
DISASSEMBLY INSTRUCTIONS	6, 7
REPLACEMENT OF HALL ELEMENT	8
CARTRIDGE INSTALLATION	8
STYLUS REPLACEMENT	8
MEASUREMENTS AND ADJUSTMENTS (English)	9, 10
MESSUNGEN UND JUSTIERUNGEN (Deutsch)	11
MESURAGES ET RÉGLAGES (Français)	12
MEDICIONES Y AJUSTES (Español)	13
BLOCK DIAGRAM	14
CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM	15, 16
SCHEMATIC DIAGRAM	17, 18
REPLACEMENT PARTS LIST	
Electrical Parts	19
Cabinet, Chassis and Packing Parts	20
EXPLODED VIEWS	21 ~ 23
PACKINGS	24

■ LOCATION OF CONTROLS

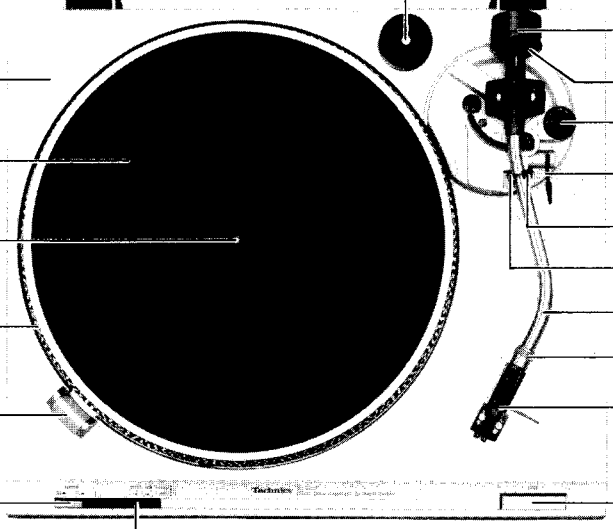

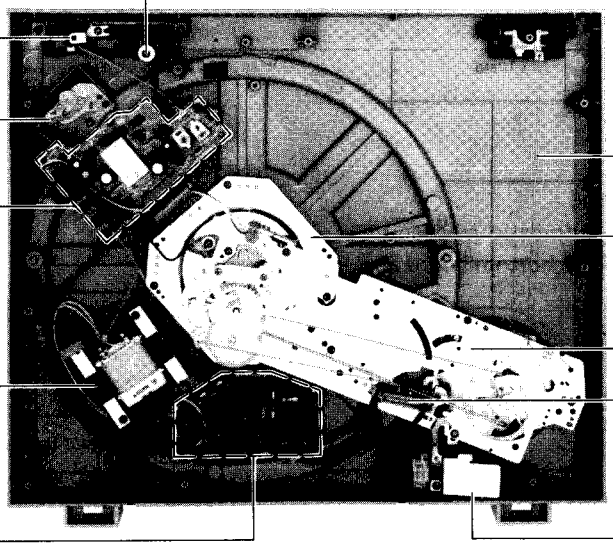

■ DISASSEMBLY INSTRUCTIONS

• How to remove the bottom board and automatic mechanism plate

1. Fix the tonearm on the rest.
2. Remove the turntable.
3. Close the dust cover, and turn over the unit, taking care not to scratch it.
4. Remove the bottom board setscrews ❶ ~ ❽. Then, the bottom board can be removed. **(See Fig. 1)**
5. Remove the shield plate setscrews ❾ and ❿. **(See Fig. 2)**
6. Remove the regulator transistor P.C.B. setscrew ⓫. **(See Fig. 2)**
7. Remove the earth lead wire setscrew ⓬.
8. Remove the automatic mechanism plate setscrews ⓭ ~ ⓱. Then the automatic mechanism plate can be removed. **(See Fig. 2)**

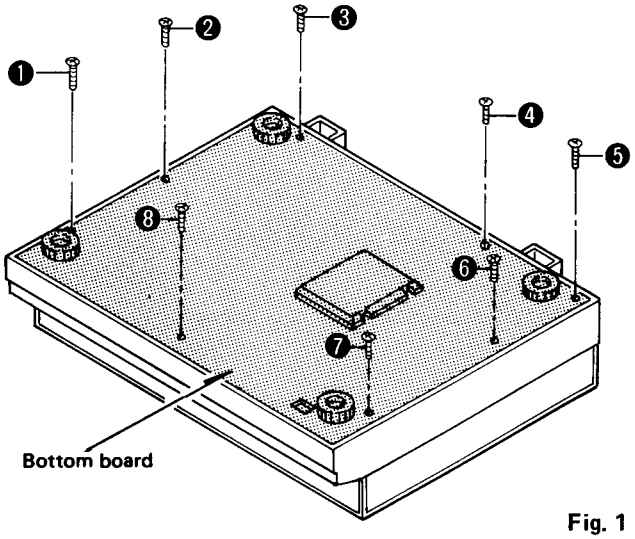

Fig. 1

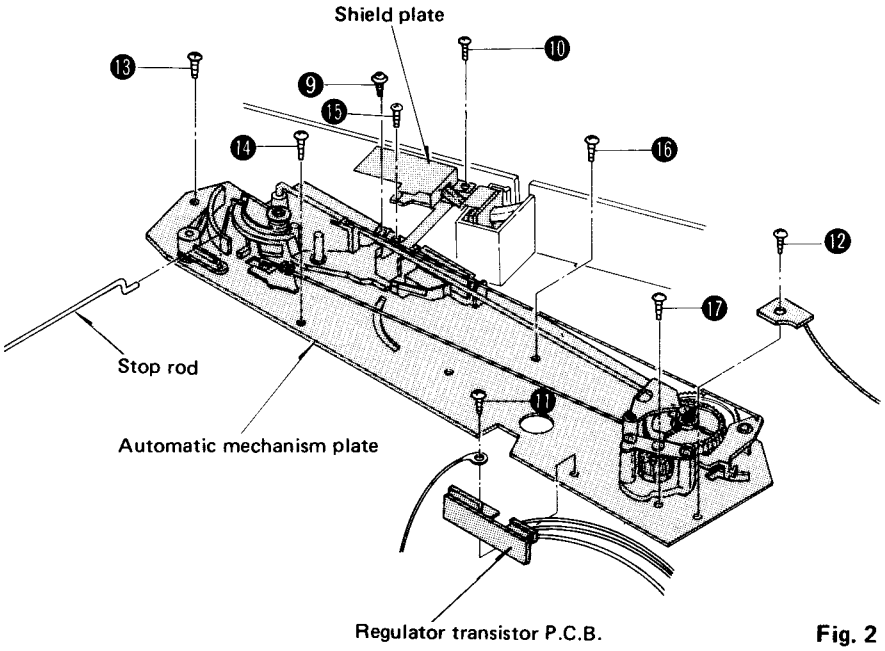

Fig. 2

• How to remove the stator frame

1. Remove the bottom board and automatic mechanism plate. **(Refer to "How to remove the bottom board and automatic mechanism plate".)**
2. Open the "lead holder" of the lead connector and pull out the lead wire of the arrow Ⓐ in **Fig. 3.**
3. Remove the stator frame setscrews ⓲ ~ ⓴. Then, the stator frame can be removed. **(See Fig. 3)**

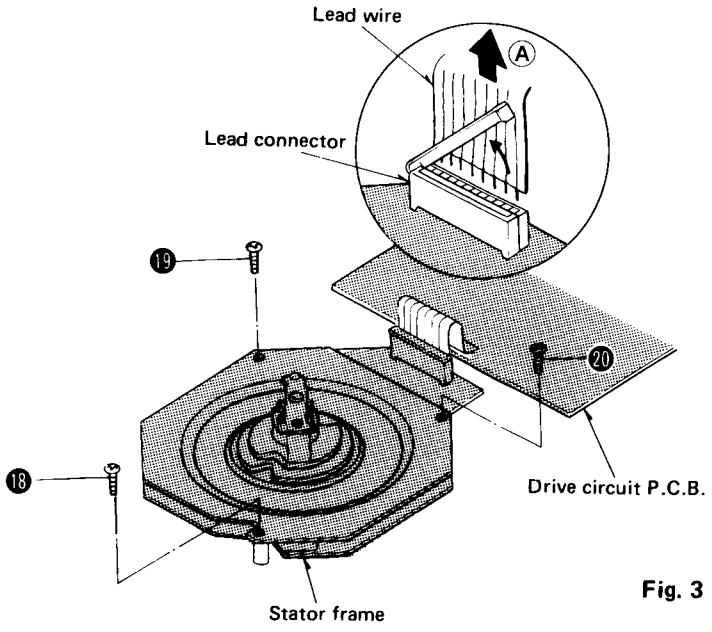

Fig. 3

• How to remove the drive circuit P.C.B.

1. Remove the bottom board. **(Refer to "How to remove the bottom board and automatic mechanism plate".)**
2. Open the "lead holder" of the lead connector and pull out the lead wire. **(Refer to "How to remove the stator frame")**
3. Remove the regulator transistor P.C.B. setscrew ⑪ and earth lead wire setscrew ⑫ . **(See Fig. 2)**
4. Remove the drive circuit P.C.B. setscrews ㉑ ~ ㉓. Then, the drive circuit P.C.B. can be removed. **(See Fig. 4)**

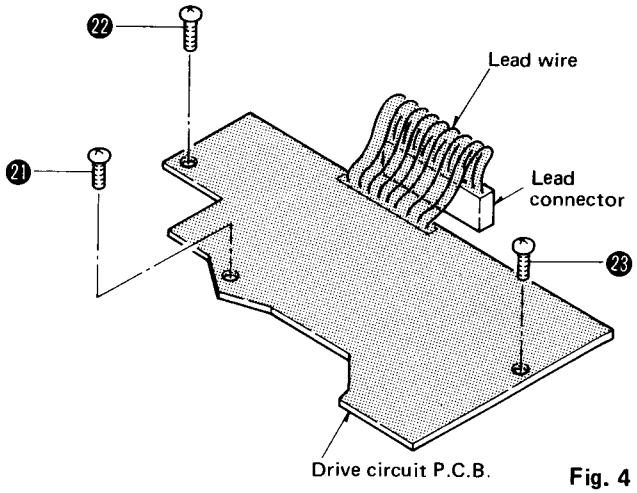

Fig. 4

• How to remove the tonearm and lift base plate

1. Remove the bottom board and automatic mechanism plate. **(Refer to "How to remove the bottom board and automatic mechanism plate".)**
2. Remove the canceller spring from the PU fixing plate, loosen the PU fixing plate setscrew ㉔ with a hexagon wrench, then the PU fixing plate is disassembled when lifted upward. **(See Fig. 5)**
3. Disconnect the soldered five lead wires from the tonearm. **(See Fig. 5)**
4. Disengage the screw ㉕ of the lead wire fixing plate and remove the tonearm stopper, then the tonearm can be taken off. **(See Fig. 5)**
5. To disassemble the lift substrate, diseangage the arm lift fixing screw ㉖ before turning over the body, then remove the arm lift. **(See Fig. 6)**
   Note: Remove the spring under the arm lift at the same time.
6. Remove the anti-skating control knob. **(See Fig. 6)**
7. Turn over the unit and remove the PU fixing plate.
8. Remove the lift base plate setscrews ㉗ ~ ㉙ . Then, the lift base plate can be removed. **(See Fig. 5)**

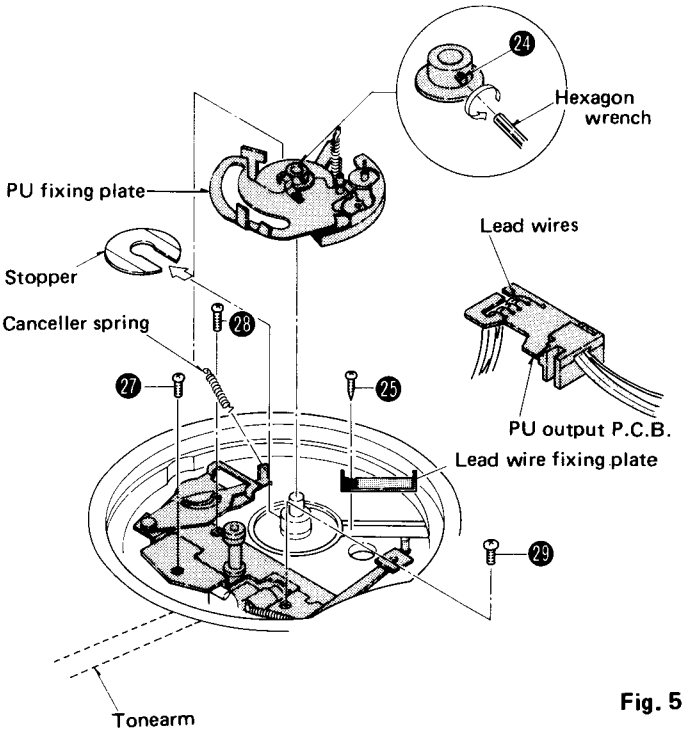

Fig. 5

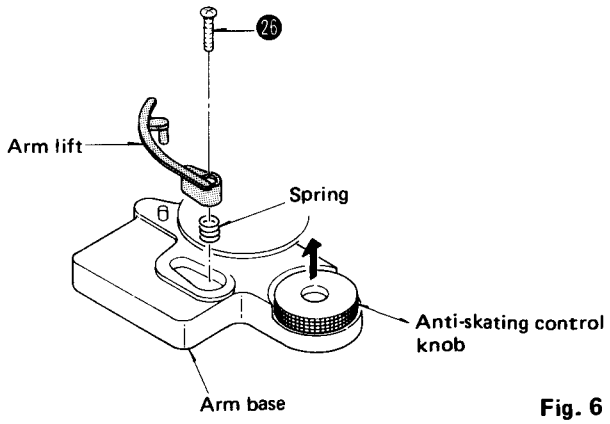

Fig. 6

■ REPLACEMENT OF HALL ELEMENT

When replacing the Hall element of the stator frame, be sure to place it with the marking side up as shown in **Fig. 7.**

* The leg position is not specified provided that the marking side is up.

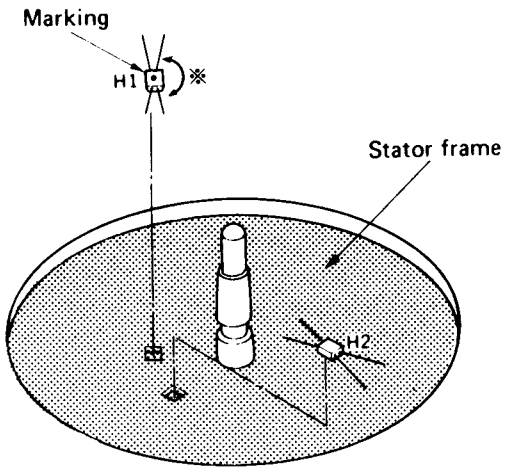

Fig. 7

■ CARTRIDGE INSTALLATION

When installing a cartridge, follow the instructions that came with the cartridge.

During installation, attach the stylus protector to guard the stylus tip from damage.

1. Connect the lead wires to the cartridge terminals.
   The terminals of most cartridges are color coded.
   Connect each lead wire to the terminal of the same color.
   White (L+) . . . . . .**Left channel** +
   Blue (L–) . . . . . .**Left channel** –
   Red (R+). . . . . **Right channel** +
   Green (R–). . . . . **Right channel** –
2. Mount the cartridge in the headshell using the screws provided with the cartridge. **(Fig. 8)**

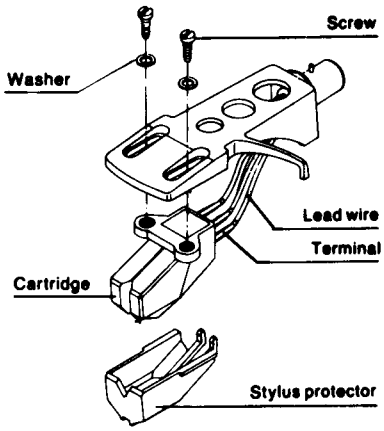

Fig. 8

■ STYLUS REPLACEMENT (Fig. 9)

The cartridge has a diamond stylus.

Replace the stylus at the first sign of wear or after about 1000 hours of use. Correct stylus pressure (tracking force) and proper record and stylus care will help extend stylus life. Stylus life varies with the conditions of use.

Noise or scratchiness may indicate a worn or damaged stylus.

To avoid damaging records, do not use a stylus that seems worn. Replace it immediately.

The replacement stylus for this cartridge is EPS-25CS.

1. Loosen the tonearm locking sleeve to remove the headsheel and cartridge.
2. Hold the headshell firmly, and with your other hand pull out on the stylus assembly in the direction of the arrow.
3. Line up the new stylus assembly with the cartridge and push in firmly as far as it will go.

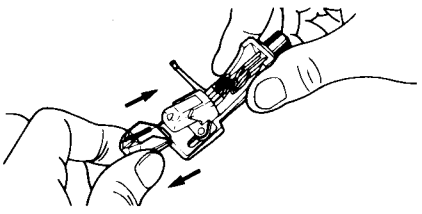

Fig. 9

■ MEASUREMENTS AND ADJUSTMENTS English

• Arm-lift height adjustment

The arm-lift height (distance between the stylus tip and record surface when the cueing control is set to the " ▼ " position) has been adjusted at the factory to approximately 5 mm (3/16"). **(Fig. 10)**

If the clearance is too narrow or too wide (because of different cartridge dimensions, for example), turn the adjustment screw clockwise or counterclockwise.

(See Fig. 11)

Clockwise rotation

–distance between the record and stylus tip is decreased.

Counterclockwise rotation

–distance between the record and stylus tip is increased.

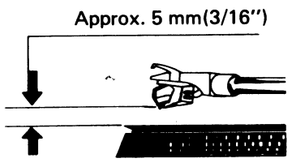

Fig. 10
(Abb. 10)

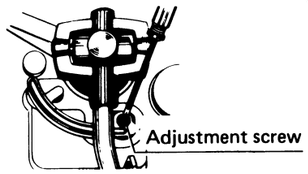

Fig. 11
(Abb. 11)

• Adjustment of automatic return position (Fig. 12)

1. Put the stylus protector on the cartridge.
2. Take off the rubber cap covering the adjustment screw section and move the tonearm toward the center of the record.
   Then, the auto-return position adjustment screw will appear.
   If the tonearm tends to return to the arm rest before the play has finished,
   –turn counterclockwise.
   If the tonearm fails to return after the final groove,
   –turn clockwise.

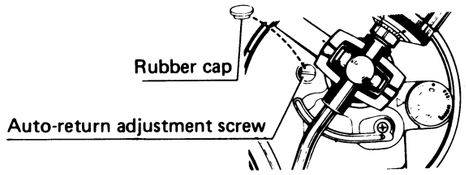

Fig. 12
(Abb. 12)

• Overhang adjustment (Fig. 13)

15 mm is the correct overhang for this tonearm.

Loosen the screws and move the cartridge forward or backward until the distance between the stylus tip and the plug becomes 52 mm (2-3/64").

Tigthen the screws without moving the cartridge.

Adjust the horizontal zero balance, stylus pressure and arm-lift height whenever you change the cartridge.

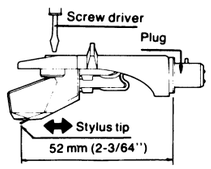

Fig. 13
(Abb. 13)

• Adjustment of rotational speed

After replacement of drive IC (IC101) and variable resistors (VR202, 203) or when the rated speed is not obtained by tuning the pitch control knob, perform the adjustment according to the following procedure.

1. Remove the bottom board. **(Refer to "Disassembly Instructions".)**
2. Place the set on the player repair table.
3. Put on the record and play.
4. Push the speed selector button to "45 r.p.m.".
5. Turn the pitch control knob to central position.
   (See Fig. 14)
6. Adjust VR202 by the screwdriver from under the set until the rated speed (45 r.p.m.) is obtained while checking it through the stroboscope. **(See Fig. 15)**
7. Push the speed selector button to "33 r.p.m.".
8. Adjust VR203 by the screwdriver until the rated speed (33-1/3 r.p.m.) is obtained while checking it through the stroboscope. **(See Fig. 15)**
9. After completing the above-mentioned adjustment, check that the rated speeds can be obtained by pushing the speed selector button.

Note: Be sure to perform the adjustment of 45 r.p.m. first.

10. As a simple method, it is also possible to adjust VR202 and VR203, removing the turntable. **(See Fig. 16)**

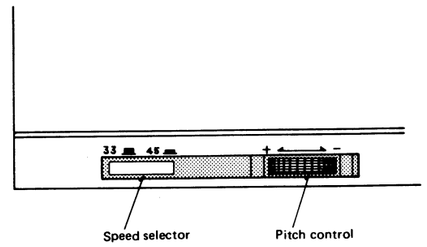

Fig. 14
(Abb. 14)

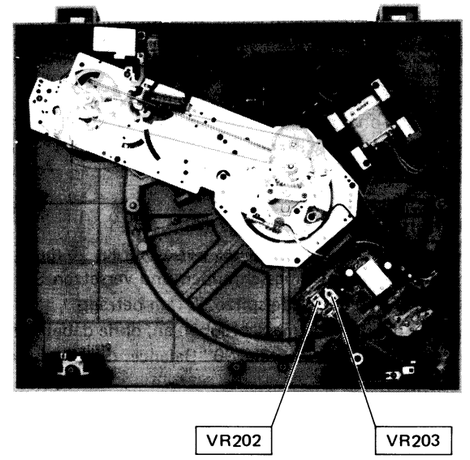

Fig. 15
(Abb. 15)

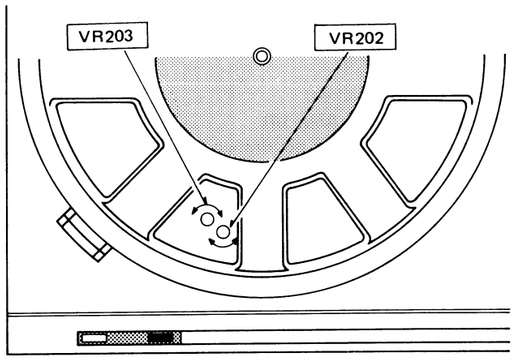

Fig. 16
(Abb. 16)

■ MESSUNGEN UND JUSTIERUNGEN Deutsch

• Justierung der Tonarmlifthöhe

Die Tonarmlifthöhe, d.h. der Abstand zwischen Nadelspitze und Schallplattenoberfläche bei Liftsteuerungs-Position " ▼ ", wurde werkseitig auf ca. 5 mm eingestellt. **(Abb. 10)**
Falls der Abstand zu klein oder zu groß ist (z.B. wegen der unterschiedlichen Tonabnehmer-Abmessungen, drehen Sie die Justierschraube im Uhrzeigersinn oder entgegen dem Uhrzeigersinn. **(Abb. 11)**
Drehung im Uhrzeigersinn
–Der Abstand zwischen der Platte und der Nadelspitze wird kleiner.
Drehung entgegen dem Uhrzeigersinn
–Der Abstand zwischen der Platte und der Nadelspitze wird größer.

• Justierung des Abschaltpunktes der Automatik (Abb. 12)

(Die Gummikappe abnehmen)
1. Setzen Sie den Nadelschutz auf den Tonabnehmer auf.
2. Führen Sie den Tonarm gegen die Plattenmitte.
   Die Justierschraube für den Abschaltpunkt der Automatik wird dann sichtbar.
   Falls der Tonarm zu früh zurückkehrt.
   –Entgegen dem Uhrzeigersinn drehen.
   Falls der Tonarm nach Erreichen der Auslaufrille nicht zurückkehrt.
   –Im Uhrzeigersinn drehen.

• Justierung dus Überhangs (Abb. 13)

Der korrekte Überhang für dieses Gerät beträgt 15 mm.
Lösen Sie die Befestigungsschrauben und versetzen Sie den Tonabnehmer vorwärts oder rückwärts, bis der Abstand zwischen dem Stecker und der Nadelspitze 52 mm beträgt.
Ziehen Sie die Befestigungsschrauben an, ohne dabei den Tonabnehmer zu verschieben.
Justieren Sie die horizontale "0"-Balance, die Auflagekraft und die Tonarmlifthöhe nach jedem Auswechseln des Tonabnehmers.

• Justierung der Drehzahl

Nach dem Ersetzen des Antriebs-IC (IC101) und der Drehwiderstände (VR202, VR203), oder wenn die Einstellung der Nenndrehzahl durch Drehen des Drehzahl-Feineinstellers nicht möglich ist, muß die Justierung auf folgende Weise vorgenommen werden.
1. Die Bodenplatte abnehmen. **(Siehe "Anleitung für die Zerlegung".)**
2. Das Gerät auf den Plattenspieler-Reparaturtisch stellen.
3. Eine Platte auflegen und abspielen.
4. Die Drehzahl-Wahlschaltertaste in die "45 U/min"-Position drücken.
5. Den Drehzahl-Feineinsteller in die Mittelstellung stellen. **(Siehe Abb. 14)**
6. VR202 mit einem Schraubenzieher von der Unterseite des Gerätes her drehen, bis die Nenndrehzahl (45 U/min) erreicht ist, und gleichzeitig auf dem Stroboskop überprüfen. **(Siehe Abb. 15)**
7. Die Drehzahl-Wahlschaltertaste in die "33 U/min"-Position drücken.
8. VR203 mit einem Schraubenzieher drehen, bis die Nenndrehzahl (33-1/3 U/min) erreicht ist, und gleichzeitig auf dem Stroboskop überprüfen. **(Siehe Abb. 15)**
9. Nach Beenden der obigen Justierung überprüfen, daß die beiden Nenndrehzahlen durch Drücken der Drehzahl-Wahlschaltertaste erreicht werden können.
   Anmerkung: Die Justierung für 45 U/min muß unbedingt zuerst durchgeführt werden.
10. Eine einfache mögliche Methode besteht darin, VR202 und VR203 nach Entfernen des Plattentellers zu justieren. **(Siehe Abb. 16)**

■ MESURAGES ET RÉGLAGES Français

• Mise au point de la hauteur de l'élévateur du bras

La hauteur de l'élévateur du bras (distance entre l'extrémité de la pointe de lecture et la surface du disque, lorsque la commande de pose et de relevage est à la position " ▼ ") a été réglée en usine sur approximativement 5 mm. **(Fig. 10)**
Si l'intervalle est trop étroit ou trop large, (à cause, par exemple, des différentes dimensions de cellules pick-up), tourner la vis de réglage dans le sens des aiguilles d'une montre ou dans le sens inverse. **(Fig. 11)**
Rotation dans le sens des aiguilled d'une montre.
–La distance entre la surface du disque et l'extrémité de la pointe de lecture diminue.
Rotation dans le sens contraire des aiguilles d'une montre.
–La distance entre la surface du disque et l'extrémité de la pointe de lecture augmente.

• Mise au point de la position de retour automatique (Fig. 12)

(Retirer le capuchon en caoutchouc.)
1. Placer le capot protecteur de la pointe de lecture sur la cellule pick-up.
2. Déplacer le bras de lecture vers le centre de disque.
   Alors, la vis de réglage du retour automatique apparaîtra.
   Si le bras de lecture tend à revenir vers le support du bras avant que l'audition ne soit terminée.
   –Tourner dans le sens contraire des aiguilles d'une montre.
   Si le bras de lecture ne peut revenir en arrière après le dernier sillon.
   –Tourner dans le sens des aiguilles d'une montre.

• Réglage du surplomb (Fig. 13)

Le surplomb approprié pour ce bras de lecture est de 15 mm.
Desserrer les vis et déplacer la cellule vers l'avant ou vers l'arrière jusqu'à ce que la distance entre l'extrémité de la pointe de lecture et la fiche soit de 52 mm.
Serrer les vis sans faire bouger la cellule.
Mettre au point l'équilibrage zéro horizontal, la force verticale d'appui de la pointe de lecture et la hauteur du bras élévateur chaque fois que vous changez de cellule.

• Réglage de la vitesse rotationnelle

Après le remplacement du circuit intégré excitateur (IC101) et des résistances variables (VR202, VR203) ou lorsque la vitesse nominale de rotation n'est pas obtenue en tournant la manette de réglage d'écart, effectuer la mise au point selon le mode opératoire suivant.
1. Retirer le panneau de la face inférieure. **(Se référer aux "Instructions de Démontage".)**
2. Placer l'appareil sur la table de dépannage pour électrophones.
3. Placer un disque et faire jouer.
4. Pousser la manette sélectrice de vitesse sur "45 r.p.m." (45 t/p.m.).
5. Tourner la manette de réglage d'écart sur la position centrale. **(Voir Fig. 14)**
6. Ajuster VR202 avec un tournevis à partir du dessous de l'appareil jusqu'à ce que la vitesse nominale de rotation (45 t/p.m.) soit obtenue tout en la vérifiant par l'intermédiaire du stroboscope. **(Voir Fig. 15)**
7. Pousser la manette sélectrice de vitesse sur "33 r.p.m." (33 t/p.m.).
8. Ajuster VR203 avec un tournevis jusqu'à ce que la vitesse nominale de rotation (33-1/3 t/p.m.) soit obtenue tout en la vérifiant par l'intermédiaire du stroboscope. **(Voir Fig. 15)**
9. Après avoir achevé la mise au point mentionnée cidessus, vérifier si les vitesses nominales de rotation peuvent être obtenues en poussant la manette sélectrice de vitesse.
   Nota: S'assurer d'effectuer tout d'abord la mise au point de 45 t/p.m.
10. Comme méthode plus simplifiée, il est possible aussi d'ajuster VR202 et VR203 en retirant la platine. **(Voir Fig. 16)**

■ MEDICIONES Y AJUSTES Español

• Ajuste de la altura de elevación del brazo

La altura de elevación del brazo (o sea, la distancia entre la punta de la aguja y la superficie del disco cuando el control de colocación está en la posición "▼") ha sido regulada en la fábrica aproximadamente a 5 mm. **(Fig. 10)**
En caso que el espacio libre fuese demasiado estrecho o demasiado abundante (debido, por ejemplo, a la diferencia en dimensiones de los cartuchos), girar el tornillo de ajuste hacia la derecha o hacia la izquierda. **(Fig. 11)**

Rotación hacia la derecha
—reduce la distancia entre el disco y la punta de la aguja.

Rotación hacia la izquierda
—aumenta la distancia entre el disco y la punta de la aguja.

• Ajuste de la posición para retorno automático (Fig. 12)

(Quitar la tapita de goma.)

1. Colocar la protección de la aguja en el cartucho.
2. Mover el brazo sonoro hacia el centro del disco.
   Con ello, aparecerá el tornillo de ajuste del retorno automático.
   Cuando el brazo sonoro tienda a volver a su apoyo antes de terminar la ejecución:
   —Girar hacia la izquierda.
   En caso que el brazo sonoro no vuelva después de haber tocado el último surco del disco:
   —Girar hacia la derecha.

• Ajuste de la proyección (Fig. 13)

La proyección correcta para este cartucho es de 15 mm.
Aflojar los tornillos y mover el cartucho para adelante y para atrás hasta que la distancia entre la punta de la aguja y la clavija sea de 52 mm.
Apretar los tornillos sin mover el cartucho.
Regular el equilibrio horizontal a cero, la presión de la aguja y la altura de elevación del brazo toda vez que se cambia el cartucho.

• Ajuste de velocidad rotacional

Después del reemplazo de IC de impulsión (IC101) y resistores variables (VR202, VR203) o cuando no se obtenga la velocidad nominal girando la perilla de control de altura, efectúe el ajuste según el siguiente procedimiento:

1. Remueva el tablero inferior. **(Refiera a "Instrucciones de Desmontaje".)**
2. Coloque el aparato sobre el banco de reparaciones para tocadiscos.
3. Ponga el disco y toque.
4. Apriete el botón selector de velocidad a "45 r.p.m.".
5. Gire la perilla de control de altura a la posición central. **(Vea la Fig. 14)**
6. Ajuste VR202 mediante el destornillador por debajo del aparato hasta que se obtenga la velocidad nominal (45 r.p.m.) mientras la verifica a través del estroboscopio. **(Vea la Fig. 15)**
7. Apriete el botón selector de velocidad a "33 r.p.m.".
8. Ajuste VR203 mediante el destornillador hasta que se obtenga la velocidad nominal (33-1/3 r.p.m.) mientras la verifica a través del estroboscopio. **(Vea la Fig. 15)**
9. Después de completar el ajuste mencionado arriba, compruebe que las velocidades nominales se puedan obtener apretando el botón selector de velocidad.
   Nota: Asegúrese de efectuar el ajuste de 45 r.p.m. primero.
10. Como un método simple, es posible también ajustar VR202 y VR203, removiendo el plato giradiscos. **(Vea la Fig. 16)**

■ BLOCK DIAGRAM

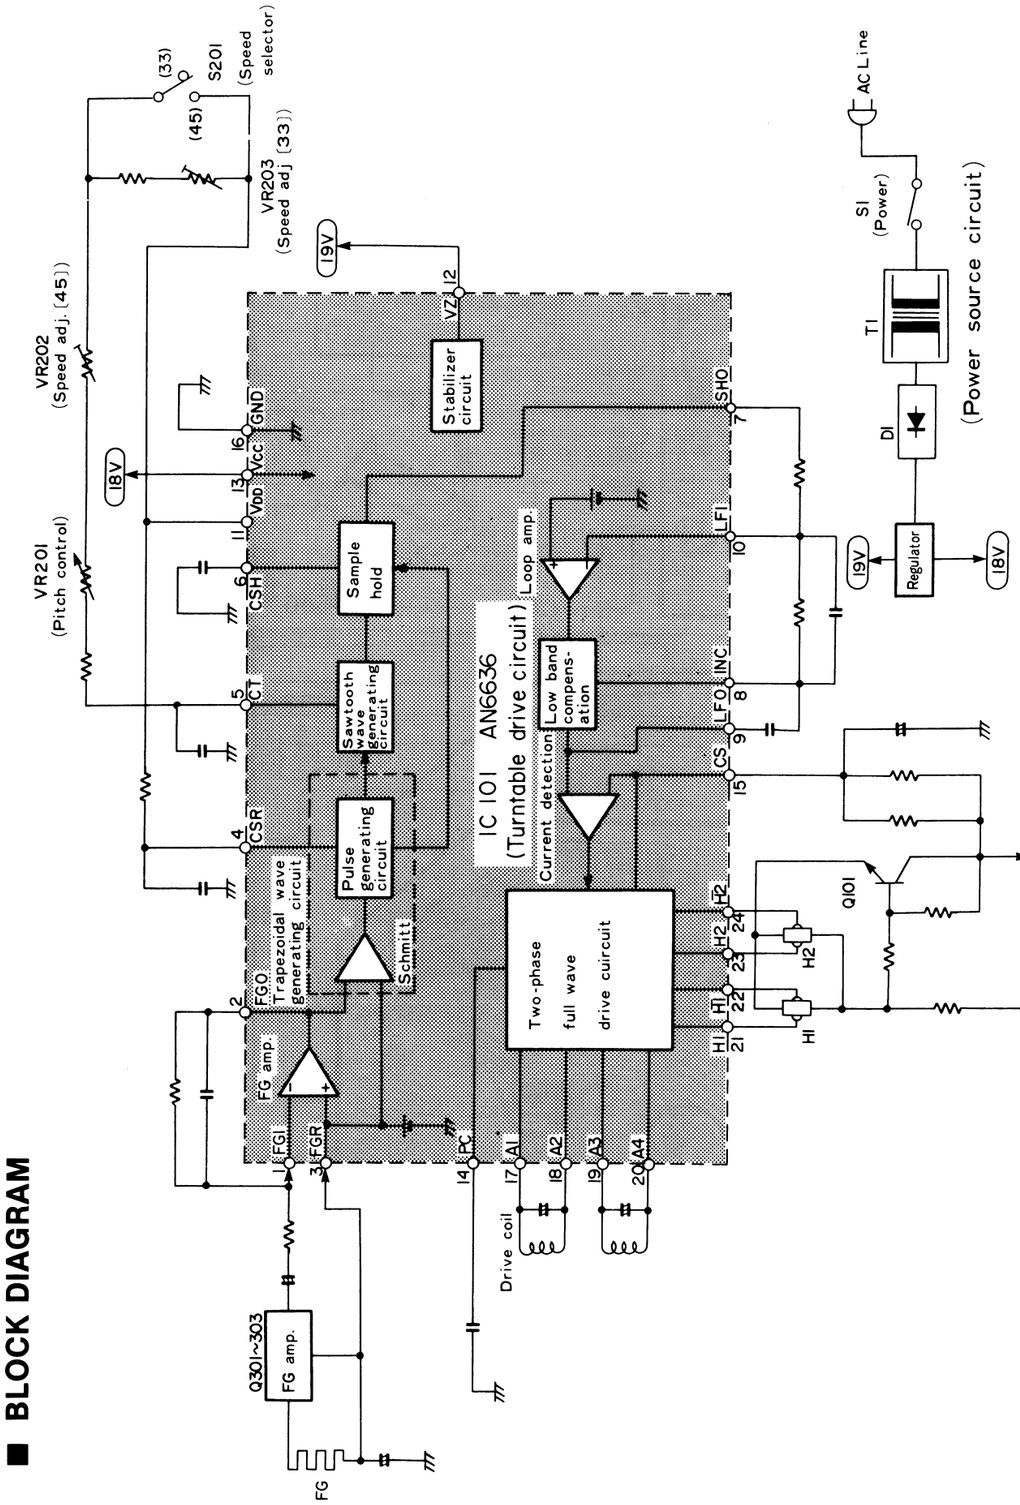

■ CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

Ground (Earth) lines

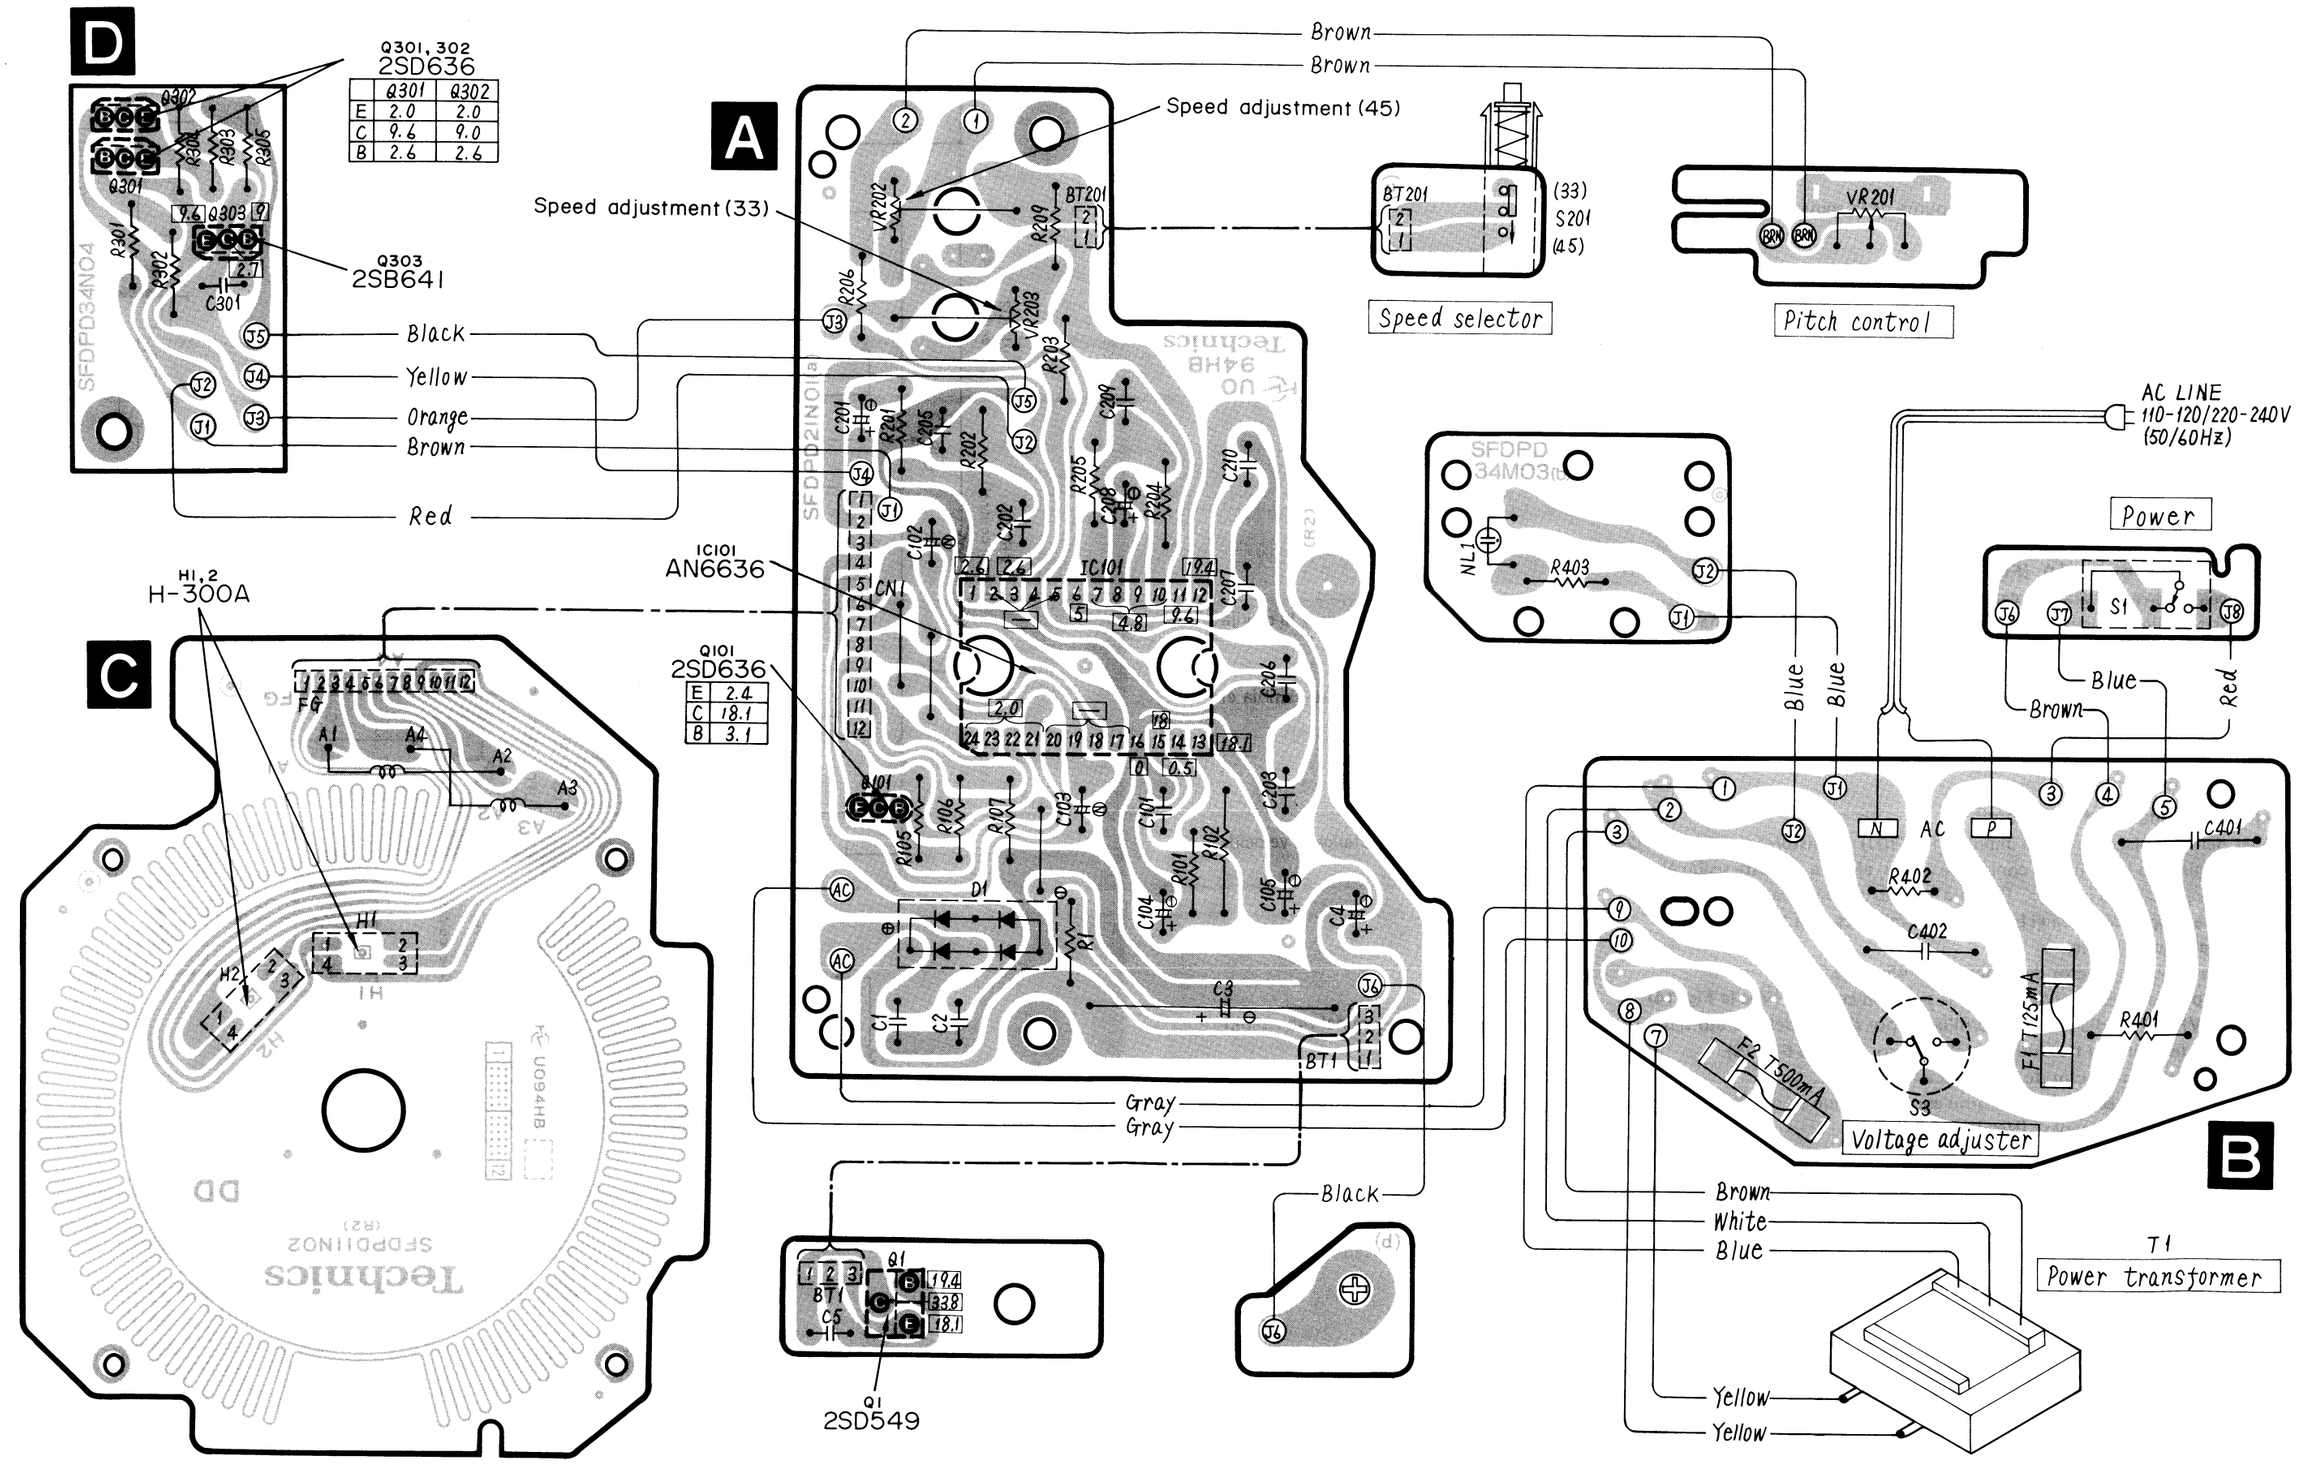

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)

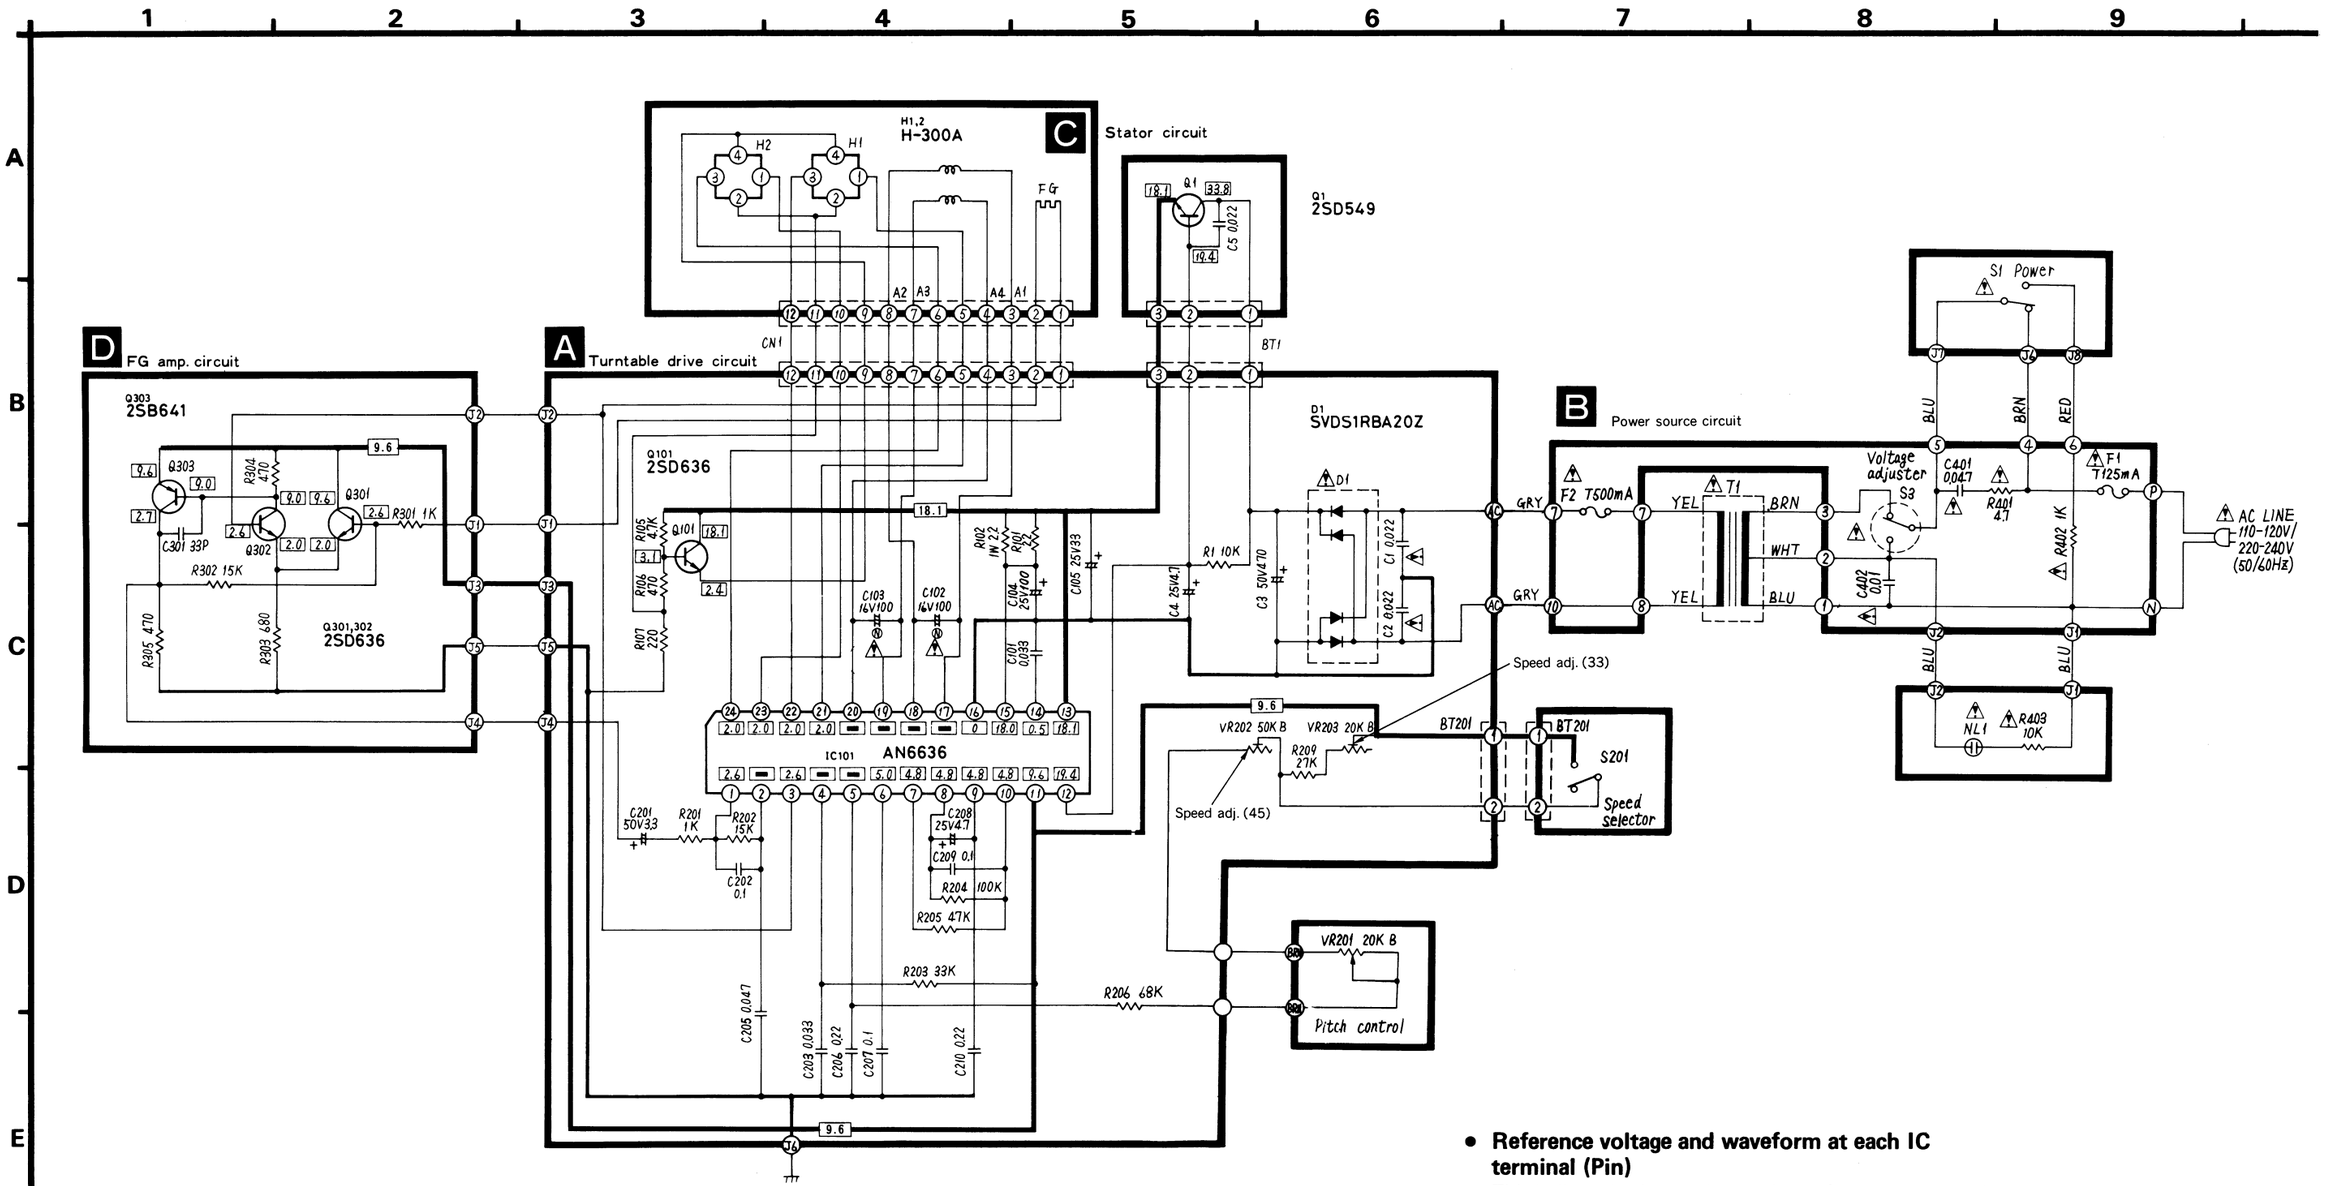

Notes:

1. **S1** : Power (Arm) switch in "**on**" position.
2. **S3** : Voltage adjuster switch in "**220 – 240V**" position.
   110 – 120V ⇄ 220 – 240V
3. **S201** : Speed selector switch in "**33-1/3 r.p.m.**" position.
   33-1/3 r.p.m. ◄——► 45 r.p.m.
4. The value in ☐ in the standard voltage for this unit operated at 33-1/3 r.p.m., which was measured by DC electronic voltmeter (high impedance) on basis of the chassis. Accordingly, the voltage value may sometimes include a slight error depending on the internal impedance of the DC voltmeter (tester, etc.) used for the measurement.
5. Important safety notice:
   Components indentified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
6. ▬ + Ⓑ voltage line.

• Terminal guide of transistors and IC

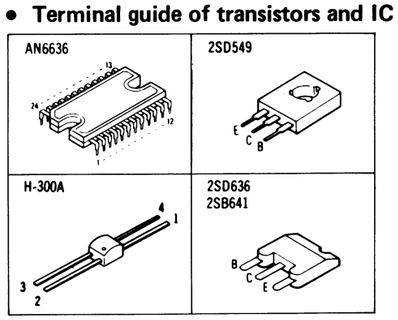

• Reference voltage and waveform at each IC terminal (Pin)

This indicated voltage values and waveform are measured by oscilloscope at 33r.p.m. rotation.

IC101 (AN6636)

Pin No.	Stop	Start	Pin No.	Stop	Start	Pin No.	Stop	Start
①	2.6V	2.6V	⑦	8.0V	20ms 5.0V 0	⑰ ⑱	0V	3.0V 0
②	2.6V	20ms 2.4V 3.0V 0	⑧	0.2V	4.8V	⑲ ⑳		
③	2.6V	2.6V	⑨	0.2V	4.8V			
④	9.4V	20ms 9.5V 0	⑩	4.8V	4.8V	㉑ ㉔	2.1V	2.0V 0
			⑪	9.6V	9.6V			
⑤	8.8V	20ms 5.0V 0	⑫	19.4V	19.4V			
			⑬	18.1V	18.1V	㉒ ㉓	2.0V	2.0V 0
⑥	8.2V	20ms 5.2V 0	⑭	0V	0.5V			
			⑮	18.1V	18.0V			

■ REPLACEMENT PARTS LIST...Electrical Parts

Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
2. Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Ref. No.		Part No.	Part Name & Description
INTEGRATED CIRCUIT			
IC101		AN6636	IC, Drive
TRANSISTORS			
Q1 Q101, 301, 302 Q303		2SD549 2SD636 2SB641	Transistor, Regulator Transistor, Regulator & FG Amp. Transistor, FG Amp.
DIODE			
D1	⚠	SVDS1RBA20Z	Diode, Rectifier
VARIABLE RESISTORS			
VR201 VR202 VR203		EVLEAAT12B24 **EVTS3MA00B54** **EVTS3MA00B24**	Pitch Control, 20kΩ (B) Speed Adjustment, 45 r.p.m. 50kΩ (B) Speed Adjustment, 33 r.p.m. 20kΩ (B)
SWITCHES			
S1 S3 S201	 ⚠ ⚠	SFDSSS5GLP1 SFDSHXW13312 SFDSB33N01	Switch, Arm (Rest) Switch Switch, Voltage Adjuster Switch, Speed Selector
HALL ELEMENT			
H1, 2		H-300A	Hall Element, Turntable Position Detector
LAMP			
NL1	⚠	SFDNE2HU	Neon Lamp, Strobe
FUSES			
F1 F2	⚠ ⚠	XBAS2C012T1A XBA2C05TR0	Fuse, T 0.12A, 250V Fuse, T 0.5A, 250V
POWER TRANSFORMER			
T1	⚠	SLT57P25E	Transformer, Power Source

Ref. No.		Part No.	Part Name & Description
RESISTORS			
R1		**ERD25FJ103**	Carbon, 1/4W, 10kΩ, ± 5%
R101		**ERD25FJ220**	Carbon, 1/4W, 22Ω, ± 5%
R102		**ERX1ANJ2R2**	Metal Oxide, 1W, 2.2Ω, ± 5%
R105		**ERD25FJ472**	Carbon, 1/4W, 4.7kΩ, ± 5%
R106		**ERD25FJ471**	Carbon, 1/4W, 470Ω, ± 5%
R107		**ERD25FJ221**	Carbon, 1/4W, 220Ω, ± 5%
R201		**ERD25FJ102**	Carbon, 1/4W, 1kΩ, ± 5%
R202		**ERD25TJ153**	Carbon, 1/4W, 15kΩ, ± 5%
R203		**ERD25TJ333**	Carbon, 1/4W, 33kΩ, ± 5%
R204		**ERD25TJ104**	Carbon, 1/4W, 100kΩ, ± 5%
R205		**ERD25TJ473**	Carbon, 1/4W, 47kΩ, ± 5%
R206		**ERO25CKF6802**	Metal Film, 1/4W, 68kΩ, ± 1%
R209		**ERD25TJ273**	Carbon, 1/4W, 27kΩ, ± 5%
R301		**ERD25FJ102**	Carbon, 1/4W, 1kΩ, ± 5%
R302		**ERD25TJ153**	Carbon, 1/4W, 15kΩ, ± 5%
R303		**ERD25FJ681**	Carbon, 1/4W, 680Ω, ± 5%
R304, 305		**ERD25FJ471**	Carbon, 1/4W, 470Ω, ± 5%
R401	⚠	**ERD50FJ4R7**	Carbon, 1/2W, 4.7Ω, ± 5%
R402	⚠	**ERD25FJ102**	Carbon, 1/4W, 1kΩ, ± 5%
R403	⚠	**ERG1ANJ103**	Metal Oxide, 1W, 10kΩ, ± 5%
CAPACITORS			
C1, 2		**ECKF1H223PF**	Ceramic, 50V, 0.022μF, ± 100 0 %
C3		**ECEB1VS471**	Electrolytic, 35V, 470μF
C4		**ECEA25Z4R7**	Electrolytic, 25V, 4.7μF
C5		**ECKF1H223PF**	Ceramic, 50V, 0.022μF, ± 100 0 %
C101		**ECQM1H333JZ**	Polyester, 50V, 0.033μF, ± 5%
C102, 103	⚠	ECEA1CN101S	Non-Polar Electrolytic, 16V, 100μF
C104		**ECEA1ES101**	Electrolytic, 25V, 100μF
C105		**ECEA1VS330**	Electrolytic, 35V, 33μF
C201		**ECEA50Z3R3**	Electrolytic, 50V, 3.3μF
C202		**ECQM1H104JZ**	Polyester, 50V, 0.1μF, ± 5%
C203		**ECQM1H333JZ**	Polyester, 50V, 0.033μF, ± 5%
C205		**ECQM1H473JZ**	Polyester, 50V, 0.047μF, ± 5%
C206		**ECQV05224JZ**	TF, 50V, 0.22μF, ± 5%
C207		**ECQM1H104JZ**	Polyester, 50V, 0.1μF, ± 5%
C208		**ECEA25Z4R7**	Electrolytic, 25V, 4.7μF
C209		**ECQM1H104JZ**	Polyester, 50V, 0.1μF, ± 5%
C210		**ECQV05224JZ**	TF, 50V, 0.22μF, ± 5%
C301		**ECCD1H330K**	Ceramic, 50V, 33pF, ± 10%
C401 [E, EK, XL]	⚠	ECQU2A473MF	Polyester, 250V, 0.047μF, ± 20%
C401 [Other Areas]	⚠	ECQE2A473MZ	Polyester, 250V, 0.047μF, ± 20%
C402 [EK] only	⚠	ECQE2A103MZ	Polyester, 50V, 0.01μF, ± 20%

Areas

- [E] is available in Switzerland and Scandinavia.
- [EK] is available in United Kingdom.
- [XL] is available in Australia.
- [EG] is available in F.R. Germany.
- [EB] is available in Belgium.
- [EF] is available in France.
- [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- [XM] is available in Central South America.
- [EH] is available in Holland.
- [Ei] is available in Italy.
- [EC] is available in Czechoslovakia.

■ REPLACEMENT PARTS LIST...Cabinet, Chassis and Packing Parts

Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
2. Important safety notice:
Components indentified by ⚠ mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
3. [K]-marked parts are used for black type only, while ○-marked parts are for silver type only.
4. Parts other than [K] and ○-marked are used for both black and silver types.
5. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.

Black type model No. : SL-D212 (K)

Ref. No.		Part No.	Part Name & Description
CABINET and CHASSIS PARTS			
1		SFTGB20-01	Turntable, Mat
2		SFTED22N01E	Turntable
3	○	SFACD21M01	Cabinet (Silver)
3	[K]	SFACD21C21	Cabinet (Black)
4 [E]		SFNND21S01	Name Plate
4 [EK, XL]		SFNND21G01	Name Plate
4 [XA, XM]		SFNND21X01	Name Plate
4 [Other, Areas]		SFNND21R01	Name Plate
5		SFUMH42M04	Guide, Stop Knob
6		SFKTB33N01A	Knob, Stop
7		SFUMB33N02	Rink, Stop Switch
8		SFUZH42M02	Rod, Stop Switch
9		SFQAB33N01	Spring, Stop Knob
10		SFUMB33N05	Guide, 33/45 r.p.m. Pich Control
11		SFKTD33-01	Knob, 33/45 r.p.m. Selector
12		SFKTD11N01	Knob, Pich Control
13		SFUM212-07	Cover, Strobe
14		SFUPD34N01	Plate, Transformer
15		SFGCD34X01	Rubber, Cushion, Transformer
16		SFAUD21M01	Bottom Board
17		SFUMB33N09	Cover, Gear
18		SFGAD21M01	Audio, Insulator
19 [EK]	⚠	SJA139	AC Cord
19 [XL]	⚠	SJA141	AC Cord
19 [Other, Areas]	⚠	SJA137	AC Cord
20 [XL]		SFUM190-12	Bushing, AC Cord
20 [Other, Areas]		SFUM190-11	Bushing, AC Cord
21		SFDJD21N01E	Connector Ass'y 2P
22		SFDJD34N01E	Connector Ass'y 3P
23		SFATB33N01A	Hinge
24		SFADB33N01E	Dust Cover
TONEARM PARTS			
100		SFPAM20201A	Tonearm
101		SFPWG20201A	Balance Weight
102		SFPCC21101A	Head, Shell
103		EPC-U25S EPS-25CS	Cartridge **Not available as parts, plase Stylus order to sales department
104		SFPRT30301E	Arm Rest
105		SFUPH42M01A	Lift Plate Ass'y
106		SFXJH42M01E	Cueing Lever Ass'y
107		SFPAB12002	Knob, Arm Lift
108		SFPGM13204	Rubber, Cueing
109		SFUPB33N04	Bracket, Lead Wire
110		SFUPB33N03A	Arm Base
111		SFQHB33N01	Spring, Canceller
112		SFPRT30302E	Arm Lift
113		SFPSP30304	Spring, Arm Lift
114		SFPJK30301	Knob, Canceller
115		SFGKH42M01	Rubber, Cap
116		SFDHC07-01A	Phono Cord Ass'y
117		SFUM212-08	Bushing, Phono Cord

Ref. No.		Part No.	Part Name & Description
SCREWS, WASHERS and CIRCLIPS			
N1		**XTV3+10BFN**	Screw, Tapping, ⊕ 3 x 10
N2		XTCS3+16GFYR	Screw, Tapping, ⊕ 3 x 16
N3		**XWA3B**	Washer, ϕ3
N4		**XTV3+8BFN**	Screw, Tapping, ⊕ 3 x 8
N5		XTW3+10Q	Screw, Tapping, ⊕ 3 x 10
N6		SFXWH31-01	Washer
N7		SFXW301-02	Washer
N8		SFCZV8800	Screw, Cartridge
N9		SFPEW9601	Washer, Cartridge
N10		XXES3D5FZ-1S	Screw, Tapping, ⊕ 3 x 5
N11		XTW3+8E	Screw, Tapping, ⊕ 3 x 5
N12		**XUB4FT**	Circlip, ϕ4
N13		**XUC3FT**	Circlip, ϕ3
N14		**XWE4**	Washer, ϕ4
N15		**XUC2FT**	Circlip, ϕ2
N16		SFXWQ34N21	Washer
N17		**XUC5FT**	Circlip, ϕ5
N18		SFXWQ30-11	Washer
N19		SFXWQ34N26	Washer
N20		**XTS3+16BFZ**	Screw, Tapping, ⊕ 3 x 16
N21		XYN3+C8S	Screw, Tapping, ⊕ 3 x 8
ACCESSORIES			
A1 [E]		SFNUD21S01	Instructions Book, Printed Matter
A1 [EK]		SFNUD21G01	Instructions Book, Printed Matter
A1 [Other, Areas]		SFNUD21X01	Instructions Book, Printed Matter
A2		SFWE212-01	Adaptor, 45 r.p.m.
A3 [XA, XM]		SFDK119118	2 Pin Plug
PACKING PARTS			
P1	○	SFHPD21M01	Carton Box (Silver)
P1 [EF]	○	SFHPD21C01	Carton Box (Silver)
P1	[K]	SFHPD21M21	Carton Box (Black)
P1 [EF]	[K]	SFHPD21C21	Carton Box (Black)
P2		SFHHH42M01	Pad, Front
P3		SFHHH42M02	Pad, Rear
P4		SFHDQ34N01	Pad, Turntable
P5		SFHZ144X02	Sheet
P6		SFYH60X60	Polyethylene Bag, Unit/Dust Cover
P7		SFYH40X45	Polyehtylene Bag, Turntable
P8		SPB1083	Polyethylene Bag, Accessory
P9		SFHDQ34X01	Front, Pad
P10		SFHDQ34X02	Rear, Pad

Areas

- [E] is available in Switzerland and Scandinavia.
- [EK] is available in United Kingdom.
- [XL] is available in Australia.
- [EG] is available in F.R. Germany.
- [EB] is available in Belgium.
- [EF] is available in France.
- [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- [XM] is available in Central South America.
- [EH] is available in Holland.
- [Ei] is available in Italy.
- [EC] is available in Czechoslovakia.

■ EXPLODED VIEWS.....Cabinet & Chassis

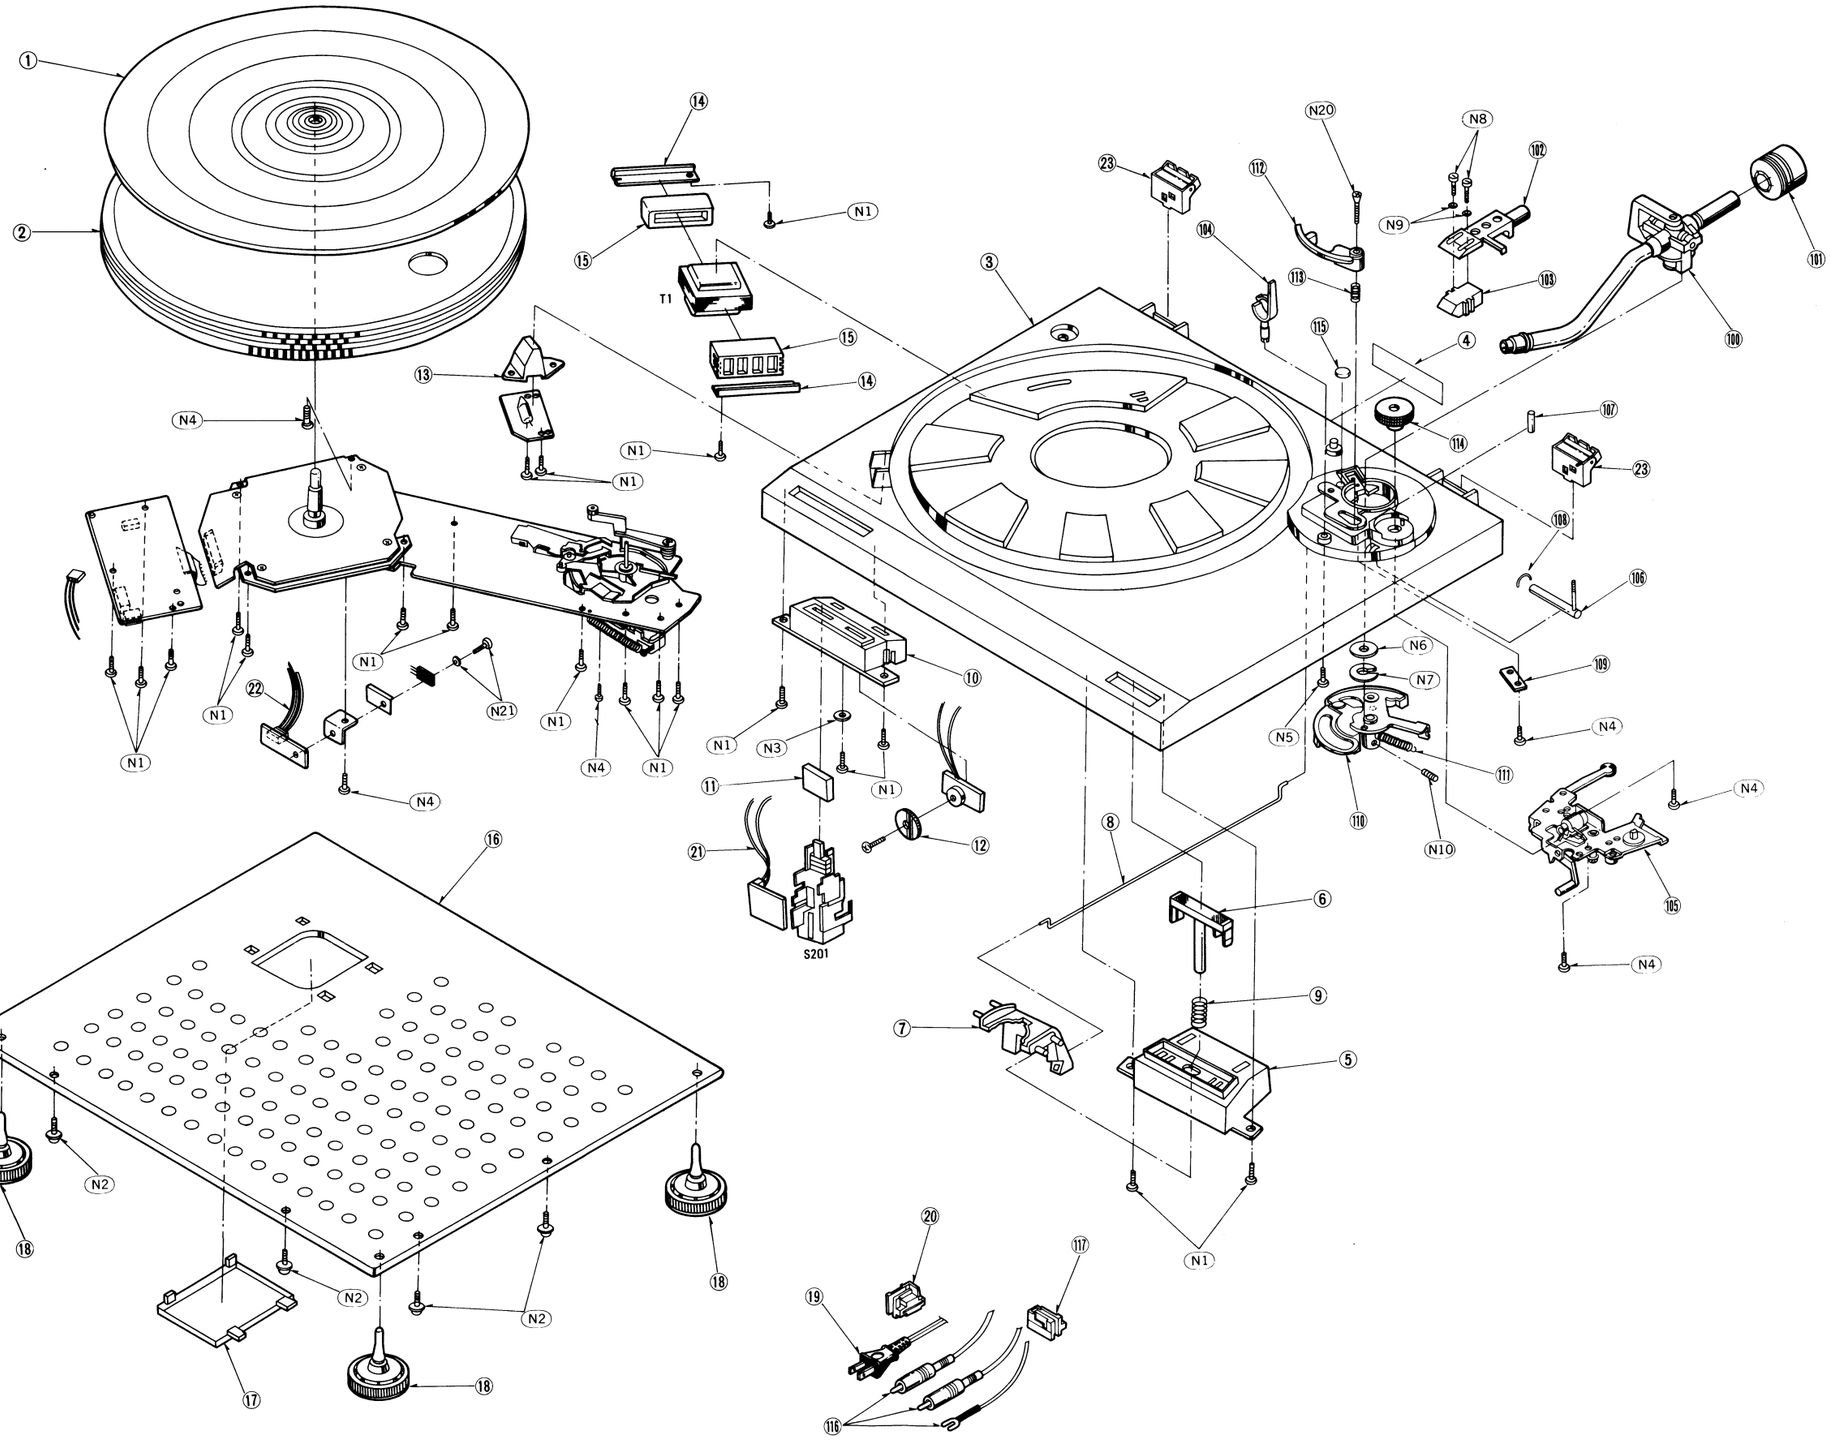

■ EXPLODED VIEWS.....Automatic Mechanism Plate

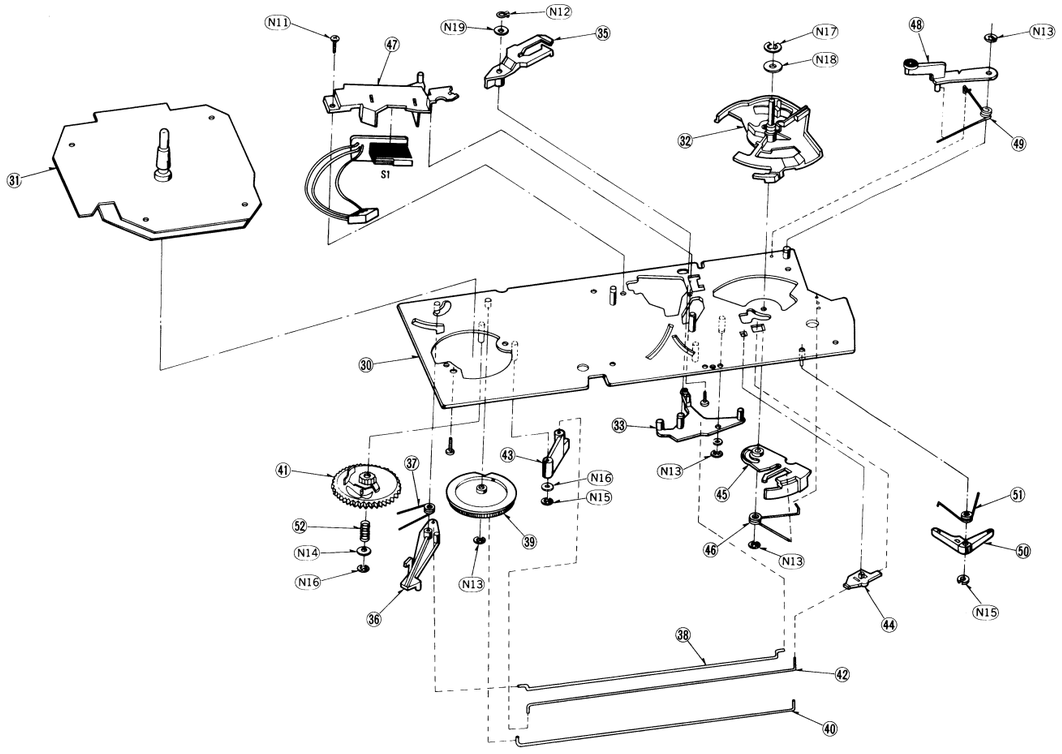

Ref. No.		Part No.	Part Name & Description
AUTOMATIC MECHANISM ASS'Y			
30		SFUKD21M21E	Plate, Automatic Mechanism
31		SFMZD34N01Z	Stater Frame Ass'y
32		SFUMQ22N03E	Cam, Drive
33		SFUMQ34N44	Lever, Switch
35		SFUMQ34N38	Lever, Stop
36		SFUMQ34N31	Plate, Stop Gear
37		SFQSQ34N21	Spring, Stop Gear
38		SFQSQ34N26	Rod, Switch
39		SFUGQ34N22	Gear, Drive
40		SFQSQ34N22	Rod, Drive

Ref. No.		Part No.	Part Name & Description
41		SFUGQ34N21E	Main Gear Ass'y
42		SFQSQ34N23	Rod, Actuating
43		SFUMQ34N42	Connector, Actuating
44		SFUMQ34N32	Support, Actuating Rod
45		SFUMQ22N02E	Cam, Start
46		SFQSQ22N01	Spring, Start
47		SFUMQ34N36	Case, Switch
48		SFUMQ34N43	Plate, Brake
49		SFQSQ34N28	Spring, Brake
50		SFUMB33N01	Lever, Start
51		SFQSB33N02	Spring, Start Lever
52		SFQAQ34N21	Spring, Main Gear

■ PACKINGS

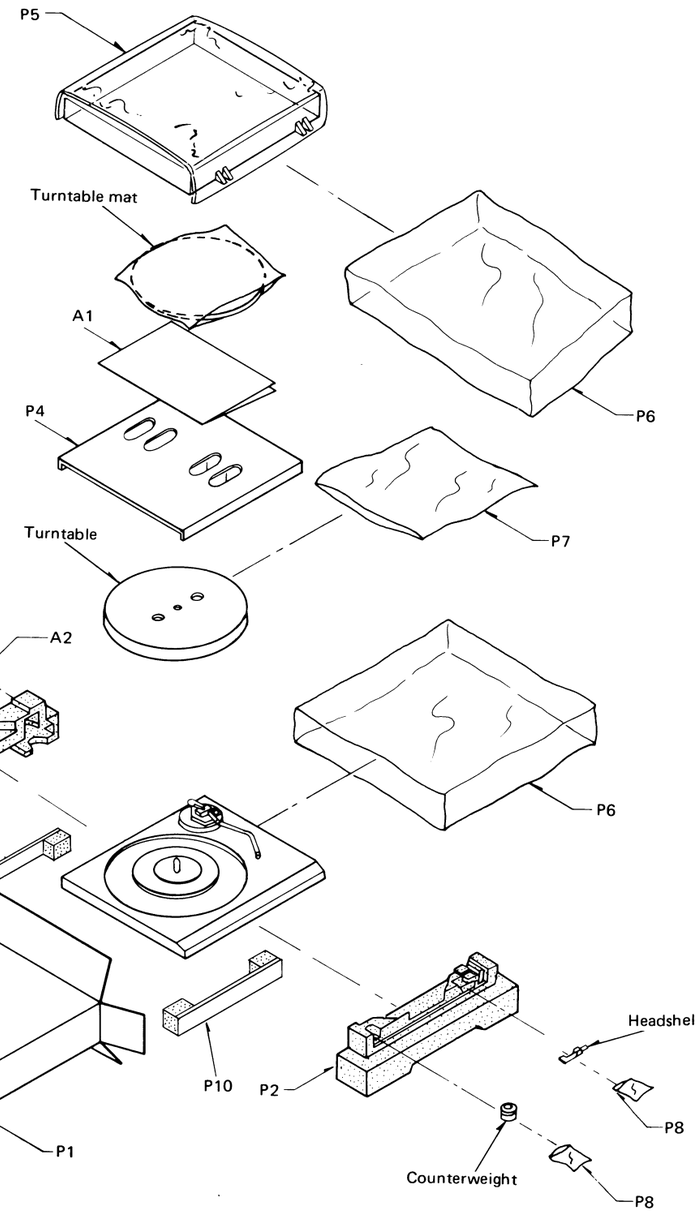

Printed in Japan
81079000 Ⓗ TK/YW